


# LIGHTWILD

## INSERTING OR REMOVING AN SD CARD FROM LIGHTWILD DMX DIRECTOR

### LOCATE THE DMX DIRECTOR\*

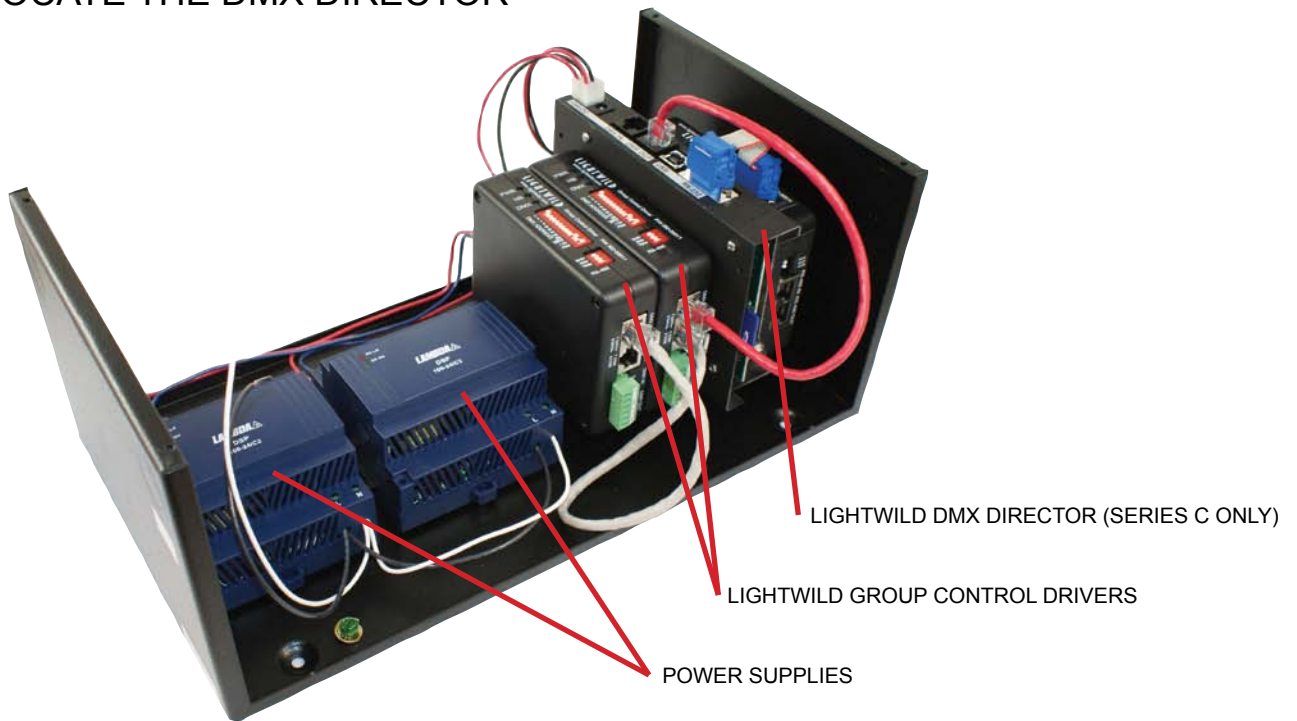


\* ENCLOSURES AND COMPONENTS VARY BY THE PROJECT. YOUR LIGHTWILD POWER AND CONTROL UNIT MAY LOOK DIFFERENT THAN THIS EXAMPLE.

### REMOVE OR INSERT AN SD CARD




FIND THE OPEN END OF THE DMX DIRECTOR CASE.

YOU WILL SEE THE END OF AN EXISTING SD CARD OR THE EMPTY SD CARD SLOT BETWEEN THE GREEN CIRCUIT BOARD AND THE BLACK CASE.

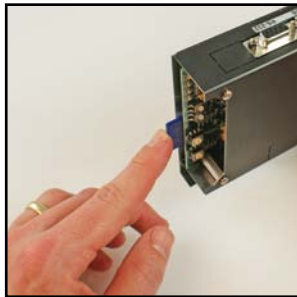

TO EJECT AN EXISTING CARD, PUSH IN ON THE CARD TOWARD THE CASE UNTIL YOU HEAR AND FEEL A SLIGHT CLICK.


RELEASE PRESSURE AND THE SD CARD SHOULD SLIDE OUT.

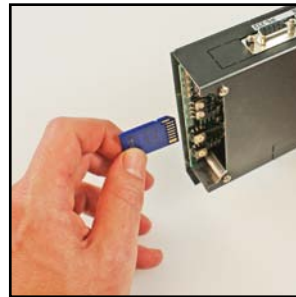

INSERT A NEW SD CARD INTO THE SAME SLOT UNDERNEATH THE CIRCUIT BOARD.

THE GOLD OR SILVER TEETH OF THE SD CARD SHOULD BE FACING THE CIRCUIT BOARD AS SHOWN ABOVE.

INSERT THE CARD UNTIL YOU FEEL AND HEAR A SLIGHT CLICK.

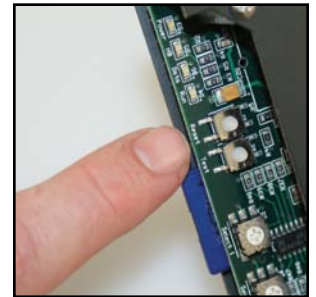

ONCE THE SD CARD IS INSTALLED AND THE DMX DIRECTOR IS POWERED ON, PRESS AND RELEASE THE SMALL WHITE BUTTON LABELED "RESET" ON THE CIRCUIT BOARD.